

Technical data sheet

225S-230T-02 Rotary actuator

Description

Rotary actuator for adjusting dampers in HVAC installations

- Running time 15...30 s / 90°
- Torque 2 Nm
- Nominal voltage 230 VAC/DC
- Control 2-/3-point
- Damper size up to approx. 0,4 m²
- Shaft coupling clamp
∅ 8-12 mm / Ø 8-16 mm



Technical data

Electrical data	Nominal voltage	230 VAC/DC, 50/60 Hz
	Nominal voltage range	85...265 VAC/DC
	Power consumption motor (motion)	1,5 W
	Power consumption standby (end position)	1,0 W
	Wire sizing	3,0 VA
	Control	2-/3-point
	Feedback signal	-
	Auxiliary switch	-
	Contact load	-
	Switching point	-
	Connection motor	screw terminals, 3-pin 0,5...1,5 mm ²
	Connection feedback potentiometer	-
	Connection auxiliary switch	-
	Connection GUAC	-
Functional data	Torque	2 Nm

Technical data

Functional data	Damper size	up to approx. 0,4 m ²
	Synchronized speed	-
	Direction of rotation	selected by switch
	Manual override	gearing latch disengaged with pushbutton, self-resetting
	Angle of rotation	0°...max. 95° can be limited with adjustable mechanical end stops
	Running time	15...30 s / 90° (load-dependent)
	Sound power level	< 45 dB(A)
	Shaft coupling	clamp \varnothing 8-12 mm / \varnothing 8-16 mm
	Position indication	mechanical with pointer
	Service life	> 60 000 cycles (0°...95°...0°)
	Safety	Protection class
Degree of protection		IP 52 (cable port downwards)
EMC		CE (2014/30/EU)
LVD		CE (2014/35/EU)
RoHS		CE (2011/65/EU - 2015/863/EU - 2017/2102/EU)
Mode of operation		Typ 1 (EN 60730-1)
Rated impulse voltage		4 kV (EN 60730-1)
Control pollution degree		3 (EN 60730-1)
Ambient temperature normal operation		-30°C...+50°C
Storage temperature		-30°C...+80°C
Ambient humidity		5...95% r.H., non condensing (EN 60730-1)
Maintenance	maintenance free	
Dimensions / Weight	Dimensions	145 x 70 x 61 mm
	Weight	450 g

Functionality / Properties

Operating mode

2 point:

Connect power supply to terminal 1+2, actuator drives to position 1. Is also terminal 3 connected to the power supply, actuator drives to position 0.

3 point:

Connect power supply to terminal 1+2, actuator drives to position 1. Is terminal 1+3 connected to the power supply, actuator drives to position 0.

The actuator is overload-proof, requires no limit switches and automatically stops, when the end stop is reached.

Direct mounting

Simple direct mounting on the damper shaft with a clamp, protection against rotating with enclosed anti-rotation lock or rather at intended attachment points.

Manual override


Manual override with self-resetting pushbutton possible (the gear is disengaged as long as the button is pressed).

Mode switch

DIP switch under the case cover

R / CW: rotary direction right / clockwise


L / CW: rotary direction left / counter clockwise



L / CCW

R / CW

Connector / Security Note

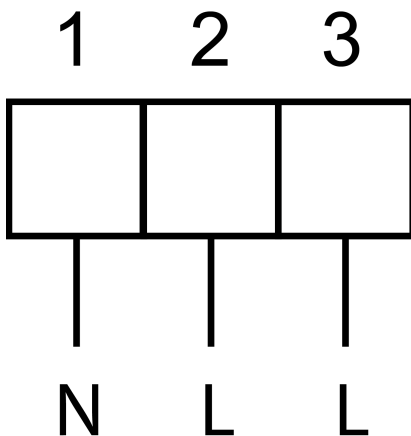

Safety remarks

- Caution: power supply voltage!
- The device is not allowed to be used outside the specified field of application, especially in airplanes.
- It may only be installed by suitably trained personnel. Any legal regulations or regulations issued by authorities must be observed during assembly.
- The device may only be opened at the manufacturer's site.
- The device is not allowed to be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- When calculating the required torque, the specifications supplied by the damper manufacturer's (cross-section, design, installation site), and the air flow conditions must be observed.

Technical Drawing

